
MRE-CT313

Current Transmitter | 50 / 5 A ... 100 / 5 A

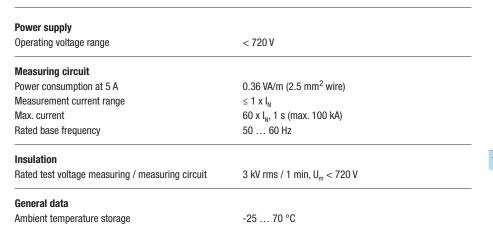

-5 ... 50 °C

fig. 2

120 g IP20

Protection degree Product references

Module width

Weight

Ambient temperature operation

Types	Product reference	50	100
Class 1, power 1 VA	MRE-CT313/5A/1-1	1	
Class 1, power 2.5 VA	MRE-CT313/5A/2.5-1		1

[&]quot;..." list primary current to complete product references.

Other transmission ratio on request. Please contact support@comatreleco.com.





fig. 1. Wiring diagram


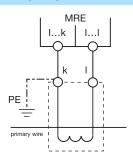


fig. 2. Dimensions (mm)

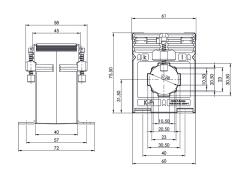

Standards and approvals

Standards IEC/EN 61869

Approvals C€



	Description	MRE-44S	MRM11	MRM11R	MRM32	MRM32R	MRU11	MRU32	MV53	SSU34	SSU31	SSU33L	MRI11	MRI32	TSR19	ESU-D2R	CT515R	CT524R
Monitoring	One phase voltage monitoring		•	•			•		•									
	Three phase voltage monitoring				•	•		•		•		•						
	Four channel voltage measuring	•																
	DC Voltage monitoring		•	•	•	•	•	•			•							•
	One phase current monitoring		•	•									•					
	Three phase current monitoring				•	•								•				
	Four channel current measuring	•																
	DC current monitoring		•	•	•	•							•	•			•	
	Phase failure				•	•		•		•	•	•						
	Phase sequence monitoring	•			•	•		•		•	•	•						
	Phase angle monitoring / measuring*	•			•	•		•		•		•						
	Differential voltage monitoring / measuring*	•								•		•						
	Neutral failure monitoring	•								•		•						
	Frequency monitoring / measuring*	•	•	•	•	•	•	•		•		•	•	•				
	Apparent power monitoring / measuring*	•	•	•	•	•												
	Active power monitoring / measuring*	•	•	•	•	•												
	Power factor monitoring / measuring*	•	•	•	•	•												
	Active energy measuring	•																
	THDI / THDU measuring	•																
	PTC monitoring														•			
	Earth failure monitoring															•		
Functions	Treshold exceeded "over" fig. 3.	•	•	•	•	•	•	•	•	•		•	•	•	•		•	•
	Theshold undershot "under" fig. 4.	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	Window function "inside" fig. 2.	•	•	•	•	•	•	•					•	•			•	•
	Window function "outside" fig.1.	•	•	•	•	•	•	•					•	•			•	•
	Alarm on-delay	•	•	•	•	•	•	•	•	•		•	•	•		•	•	•
	Alarm off-delay	•	•	•	•	•	•	•	•				•	•				
	Error storage function	•	•	•	•	•	•	•					•	•	•			
	Threshold selectable	•	•	•	•	•	•	•	•	•			•	•	•	•	•	•
	Threshold fixed										•	•			•			
Power supply	Supply isolated from measuring circuit	•	•	•	•	•	•	•					•	•	•	•		
	Supply from measure circuit								•	•	•	•					•	•
Mounting	DIN rail mounting	•	•	•	•	•	•	•	•	•			•	•		•		
	Housing according IEC/EN 43880 (electrical distribution mounting)	•	•	•	•	•	•	•	•					•	•			
	Plug-in (socket mounting)		L									•	•		•		•	•

*Measuring: MRE-44S only

